

Natural Voice


Quick guide to use the system:

- Put the headset microphone on in a way that you feel comfortable and adjust the microphone receiver close to your mouth with right angle. Turn on the power, then adjust the sound volume.
 - FM radio: Extend the antenna, press button "M" and open the FM mode, then long press "▶|◀" switch to automatically search for radio stations
 - One key record: You can use wired microphone (or speak aim the insert microphone directly) to make one key recording. Short press REC key, and you can begin to record. Make sure the USB thumb drive or Micro-SD card is inserted and speak via wired microphone. (Wireless Microphone will not work on voice recording.) Short press REC again to stop recording and the system will automatically play the recorded files. The recorded files will be saved automatically to the USB thumb drive or Micro-SD card. When the system is turned on and the wired microphone is not plugged in, long press and hold REC key to play back the last recorded file.
 - Playing Back: When the SD card or USB thumb drive is inserted, you can play back the music stored in them. The system will read the USB thumb drive first when both are in the system. Press M to select Audio mode to play the music. When playing the music, Press and hold button "M" to select one music repeat mode or to repeat all music in the storage card. When it shows ONE, it is a single music repeat, when it shows ALL, it will repeat all the music in the memory cards.
 - Aux In: Use Mode button "M" to select the Aux Mode, after the Aux mode is set, you can connect an iPod or other music player to play back your music through this fantastic speaker.
 - Charging: If the battery icon of the device begins to blink constantly, it means it is low in voltage and needs to be charged. Please use DC 5V power charger. The other end connects with the power supply AC 110-240V. The battery icon will flash when charging, and the light will stop flashing after fully charged.
- Notes: We suggest that you fully charge the amplifier before you use it the first time.

Caution and trouble shooting:

- 1) No sound and no sign on LCD. Check the battery level, and charge it.
- 2) Screaming. Keep the speaker face away from the microphone; keep the distance between voice amplifier and MIC longer than 60cm to avoid screaming.
- 3) Recharge when battery level is low.
- 4) The amplifier should be kept in dry and ventilated area. Rain and water should be avoided.
- 5) Original accessories are suggested if they need to be replaced.
- 6) If you have any questions, please contact SHIDU for advice. Please visit www.10shidu.com for news and service info.

Voice Amplifier User Manual

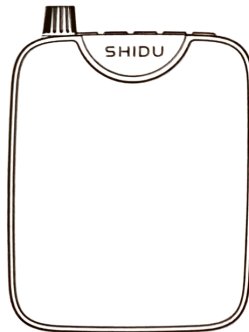

SD-M500

SHIDU Guarantee:

100% SHIDU Guaranteed Product Satisfaction.

We promise 1 year warranty.

If you have any questions, please feel free to contact us, we will try our best to provide you the best service.

Thank you for purchasing our SD-M500 PA system. This PA system is perfect for the user who needs be heard in front of a group. With a wired headset microphone, you can amplify your voice easily and be heard from afar. This system support micro-SD card and USB flash drive; you can play music from them. The built in FM receiver delivers clear audio.

Please read the instructions carefully before using the system.


Features:

1. 18650 Lithium Rechargeable Battery Driven PA system
2. Stylish, ergonomic and comfortable design
4. Hi Fi double magnetic speaker
5. Special amplification electro-acoustic system
6. Super MP3 audio decoding — supports Micro-SD Card & USB flash drive
7. FM stereo radio Receiver
8. Insert microphone for recording

Specification:

Output power:	10W	Frequency response:	90Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10°C-45°C
Charging voltage:	DC5V 500mA	Amplify time:	10-12 hours
Music play time:	6-8hours	Charging time:	3-5 hours

Function Illustration:

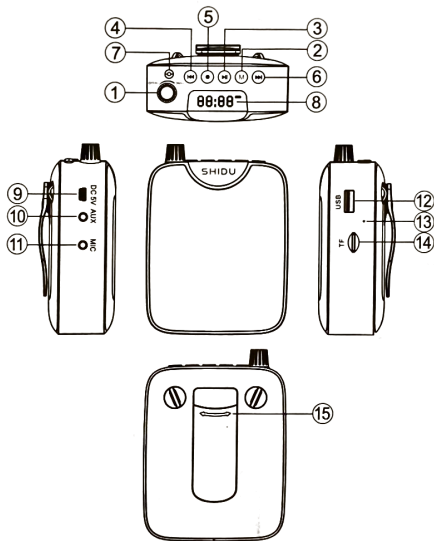

1. Main Power switch / FM & MP3 volume control;

2. Mode key: Use this button to select system mode from UHF mode, MP3 mode, FM radio mode, LINE mode.

3. Play / pause;

4. Previous: In MP3 mode, short press to go to previous music, long press to fast rewind;

5. Recording: One touch voice recording

6. Next: In MP3 mode, short press to go to next music, long press to fast forward;

7. Telescopic FM Antenna

8. Digital display screen

9. DC 5V charging port

10. AUX: LINE audio input; Connect the amplifier with computer, phone, MP3/iMP4 or other device with audio cable. short press "M" to set to the AUX IN mode, then it can play the audios directly from other devices.

11. Wired microphone Jack (this model supports wired microphone input);

12. USB Port;

13. Built-in Mic only for recording

14. Micro-SD card slot;

15. Detachable clip: Rotating anti-clockwise to detach the clip.